

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations

Service Center Dept. 168

3000 Pontiac Trail

Commerce Township, MI 48390

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU

OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.siprducts.com

THE
SHARPER
IMAGE

Robot Coin Bank



Instruction Manual and
Warranty Information

GF-D100

1 year
limited warranty

THE SHARPER IMAGE ® name and logo are registered trademarks.
Marketed and distributed by SI Products under license. ©The Sharper Image.
All rights reserved.

IB-GFD100

SI Products
Service Center

1.888.856.6781
8:30a.m. – 7:00p.m. (EST)
M – F

Mail To: SI Products
Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI
48390

e-mail:
cservice@siprducts.com



Saving money is more fun with a personal robot.

Thank you for purchasing The Sharper Image® Robot Coin Bank. This product, along with the entire The Sharper Image® collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Keep all your loose change in one place with a robot in charge. Not only does he greet you when you approach him, he counts your money, tracks the balance and withdrawals.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Battery compartments should only be accessed and batteries removed, charged and disposed of by adults or under adult supervision.

WARNING: LOOSE COINS (NOT INCLUDED) AND SMALL PARTS MAY POSE A CHOKING HAZARD FOR YOUNG CHILDREN. PRODUCT IS NOT INTENDED FOR CHILDREN UNDER 3 YEARS OF AGE. THIS UNIT SHOULD NOT BE USED BY ANY CHILD WITHOUT ADULT SUPERVISION.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

 
 
 
WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by THE SHARPER IMAGE®; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord, plug, cable or housing. If it is not working properly, if it has been dropped or damaged, return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not carry this appliance by power cord or use cord as handle.
- To disconnect, remove plug from outlet.
- This appliance is designed for indoor use only. Do not use outdoors.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.
- Supply terminals are not to be short-circuited.

Caution – Please read all instructions carefully before operating.

- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the cord away from high temperature and fire.
- Do not lift, carry, hang, or pull the product by the power cord.
- If the adaptor sustains damage, you must stop using this product immediately and contact SI Products Service Center. (See the warranty section for SI Products address.)

SAVE THESE INSTRUCTIONS

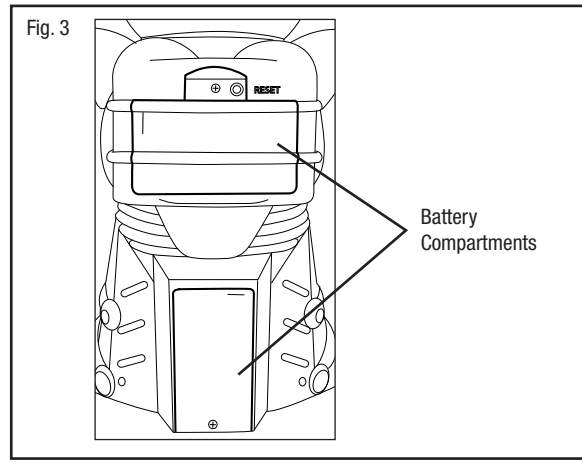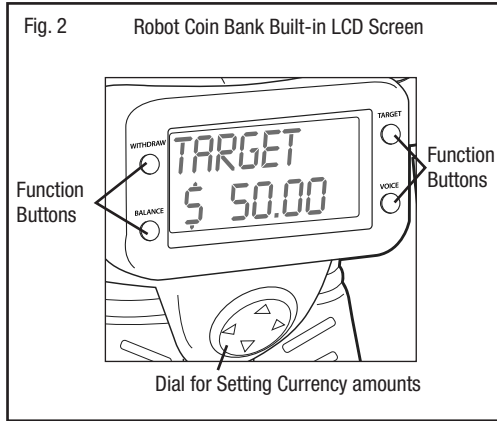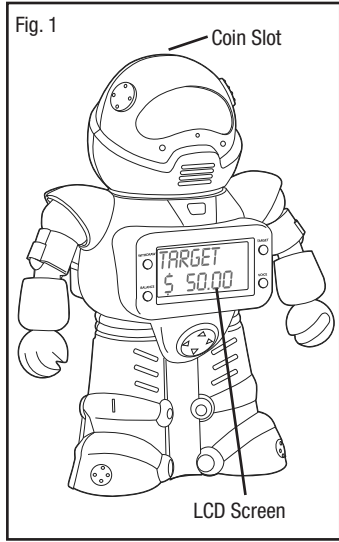

Special Features:

- Robot Bank lights up, moves his arms and talks to you as you approach him
- Recognizes and tabulates every coin saved
- Keeps track of your savings and target goals
- Manages each of your withdrawals
- Powered by 4 (four) AA batteries (not included)

Getting Started

Battery Installation:

This unit uses 4 (four) AA batteries (not included). Please install batteries in the back of the Robot in two locations. (Fig. 3)

Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/- polarities as marked in the battery compartments. Incorrect installation of battery may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

Depositing Coins

1. Insert coin into coin slot on top of the Robot's head. (Fig. 1)
2. Please insert coins slowly and one at a time.
3. The Robot Bank will recognize and announce the coin value.
4. The screen display on the chest will show total balance.
5. You may also see and hear the balance total by pressing the **balance** button.

Withdrawing Coins

1. Open the cover cap under Robot's feet to withdraw the desired amount. Then securely replace cap. (Fig. 1)

2. Press and hold the **withdraw** button for 2 seconds. (Fig.2)
 3. The Robot Bank will say "*Uh-oh! I hope you have a good reason for withdrawing your savings.*"
 4. "DOLLAR" digits flash. Press the **up** or **down** to select the dollar amount, then press the **right** or **left** button to confirm.
 5. "CENT" digits flash. Press **up** or **down** to select the cent amount to complete the total amount.
 6. To confirm the withdrawal amount, press **withdraw** button.
 7. The Robot Bank will display and announce the **balance** after deducting your withdrawal value.
- NOTE:** If the money amount you wish to withdraw is more than what you have in the bank, the screen will display a "withdraw error" message. It will then repeat your balance amount.

Setting a Target Balance

1. Press the **target** button to show target amount. (Fig. 2) If a target was set, the robot announces the target amount. If no target was set, the robot says: "You have no target. Please set it now".
2. Press and hold the target button for 2 seconds to enter the target amount setting mode.
3. "DOLLAR" digit flashes, to select dollar amount, press **up** or **down** and press **right** or **left** button to confirm.
4. "CENT" digit flashes, to select cent amount, press **up** or **down**.
5. To confirm the target amount, press the **target** button and the Robot will announce your new target amount.
6. When your balance amount achieves your set target amount, the robot will congratulate you, "*Well done, you did it! You have met your goal. Great Job*" or "*When do you want to withdraw your savings?*"

Robot Voice Control

Press the **voice** button once to turn "VOICE ON." Press again to turn "VOICE OFF." Robot voice status will display on the screen.

When you come within the range of the Robot Bank (about 20 inches away), the Robot will move his arms and his eyes will flash behind his blue helmet visor. A number of different sayings will be announced to welcome you:

- "*Hello, my name is TSI 5000. Nice to meet you.*"
- "*How are you?*"
- "*Have a nice day.*"

Maintenance

To Store

You may leave the unit on display, or you can store it in its box in a cool, dry place.

To Clean

Use only a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.

Modifications not authorized by the manufacturer may void user warranty.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.