


OS-3505 uCrown

Thank you for purchasing the OSIM uCrown. Before you start using the uCrown, please read the operation manual thoroughly for the correct methods of usage, especially taking note of the section on Safety.


This manual should be kept on hand for easy reference. It is your guide to a safe and efficient operation.

Contents

Safety	2
Names of Parts and Functions	5
Features and Effectiveness	7
Preparation Before Use	8
Operation	10
Product Care and Storage	13
Troubleshooting	14
Specifications	15

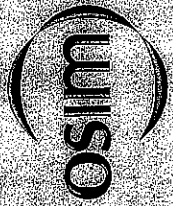

uCrown
Operation Manual

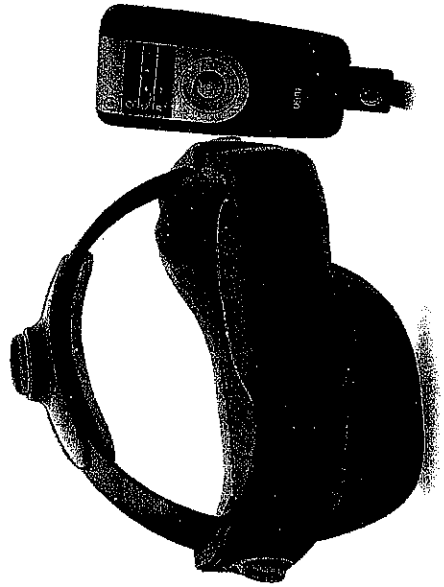

Safety

1. Usage Environment

- Do not use the uCrown in an excessively humid or dusty environment as it may result in malfunction or electric shock.
- Do not expose the uCrown to heaters, stoves or direct sunlight.
- Do not use the uCrown in temperatures higher than 40°C

⚠ Caution

- If you use the uCrown in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the uCrown is stored in a cold place, and is being brought into a warm environment, it is advisable to wait one hour before use. This is because the uCrown may not be at optimum performance, as there may be water droplets on mechanical parts due to condensation. Using the uCrown under such condition may result in malfunction.

2. People with Medical Conditions

Please consult your doctor before use if you:

- have any eye ailment or injury.
- had head injury.
- have suffered burn injuries on the surrounding areas of the head.
- have skin, ear, nose and mouth disease.
- are under medication or are not feeling well.
- have abnormal blood pressure.
- have migraine.
- are pregnant or menstruating.
- have an electronic medical device in your body, such as a pacemaker.

Safety

3. Safety Precautions During Use

- To ensure safe and correct use of the uCrown, do not operate it without carefully reading this operation manual.
- Do not use the uCrown in places with a high temperature and humidity environment.
- Do not insert or spill any liquid onto the uCrown as this may result in malfunction or electric shock.
- Do not use the uCrown under a blanket or pillow as excessive heating can occur and cause fire or injury to the user.
- Do not place the uCrown near inflammable object. The body cover may have the risk of damage from the heat.
- The uCrown is designed for home use and not for commercial purposes.
- Stop immediately should you experience any discomfort.
- uCrown is not meant to be used while lying down.
- Do not use the uCrown if you have an eye or head operation recently.
- Stop using the uCrown and consult your doctor if you are unwell, or if use irritates the skin.
- Stop using the uCrown if you feel any physical discomfort or if you detect anything unusual in the performance of the uCrown.
- Do not use the uCrown if you are under the influence of alcohol or not feeling well.
- Do not let children under 12 years old, or persons who need supervision to operate the uCrown. Keep the uCrown out of reach from children.
- It is advisable not to use the uCrown for more than 15 minutes continuously.
- Use alkaline batteries for optimum performance.
- Do not use the uCrown in a room with high humidity or while showering or bathing.
- Avoid using the uCrown in strong sunlight and near corrosive gas.
- Do not use the uCrown while walking outdoors or driving a car.
- Do not use the uCrown together with other electronic products. Do not use the uCrown other than for its stated purpose.
- Do not drop the uCrown on the ground or dip it into water.
- Use 'AA' size batteries. Remove batteries from the compartment when not using the uCrown for a long time so as to prevent any battery leakage.
- The user is advised to keep the audio volume at a reasonable level. Continued usage at a high volume can lead to permanent hearing damage.

Safety

⚠ Caution

- The uCrown is not meant for infants.
- The uCrown is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the uCrown by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the uCrown.
- Do not use the uCrown if you are under the influence of alcohol or not feeling well.
- The recommended maximum duration of usage is 15 minutes.

4. Instances When the uCrown Should Not Be Used

In the following events, please switch off the uCrown immediately and contact the OSIM Service Centre for servicing.


- If abnormal or severe pain is felt during the massage, stop usage immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during use.

5. Assembly and Repair of the uCrown

- Do not remove the plastic cover of the remote control. Touching the internal mechanism may result in malfunction or electric shock.
- The uCrown must only be serviced or repaired by the OSIM Service Centre. Do not disassemble or try to repair the uCrown yourself.

Names of Parts and Functions


Head Unit

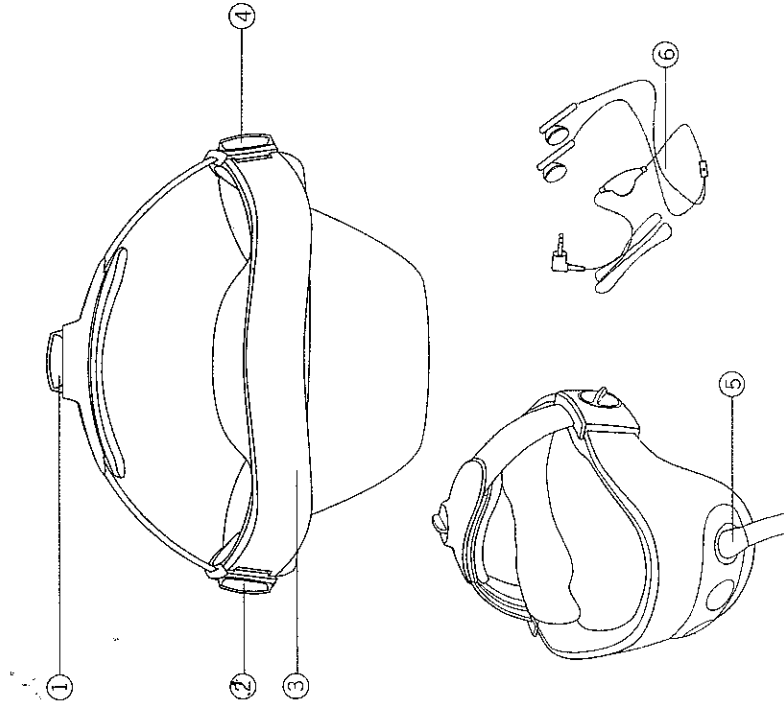

1. Adjustable knob
2. Adjustable knob
3. Head Unit
4. Adjustable knob
5. Air tube
6. Ear-phones

Names of Parts and Functions

Remote Control

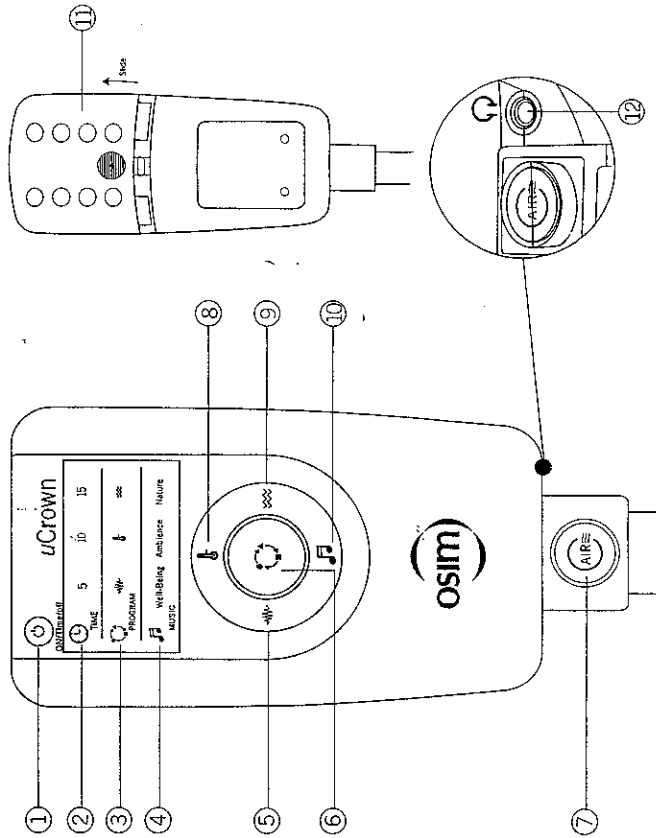

1. ON/Time/Off Button
2. Time Indicator
3. Program Indicator
4. Music Indicator
5. Airbag Massage Button
6. Programme Toggle Button
7. Air Release Button
8. Heat Button
9. Vibration Massage Button
10. Music Button
11. Battery Compartment
12. Ear-phone Jack

⚠ Caution

- Do not sit or step on the uCrown.
- Do not drop the uCrown.
- Do not handle the uCrown with wet hands.

Features and Effectiveness

Features


- Stylish design.
- Vibration and heating function.
- One automatic healthcare massage programme, activated upon powering on the unit.
- Music for listening pleasure with built in speakers or ear-phones.
- Choices of 3 types of music: Well-Being, Ambient and Nature
- Ease of operation.
- Safely air-release button.
- Adjustable head unit to fit most head sizes.
- Magnetic nodes improves circulation around the head area, enhancing the massage effectiveness.

Effectiveness

The uCrown is a head massager which uses well placed airbags, vibration massages and heat at acupressure points to relief tension and reduces stress. The uCrown also improves blood circulation of the head.

Acupressure points:

- **Tai Yang** : Relieves fatigue, headache, rejuvenate one's mind, improves alertness.
- **Yang Bai** : Relieves tired eyes.
- **Bai Hui** : Relieves headaches, dizziness, hang-overs, insomnia, anxiety and reduces high blood pressure.
- **Feng Chi** : Relieves headache, dizziness, stiff neck, insomnia and tired eyes.

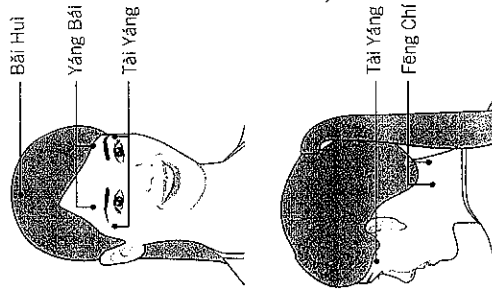

The uCrown has 2 magnets on the vibrating massage nodes at the Feng Chi acupressure points. These magnets generates micro-current in the blood vessels which improves blood circulation.

Preparation Before Use

Battery Installation


1. Open the battery compartment cover at the back of controller.
2. Insert 4 x AA batteries into the compartment.
3. Please ensure that the (+) and (-) polarities of the batteries are fitted correctly.
4. Close the battery cover once the batteries have been properly inserted.

Note

- Remove the batteries whenever you are not using the uCrown.


Wearing of uCrown

1. Wear the uCrown as shown in the diagram. Ensure that the front portion of the uCrown doesn't cover your eyes.

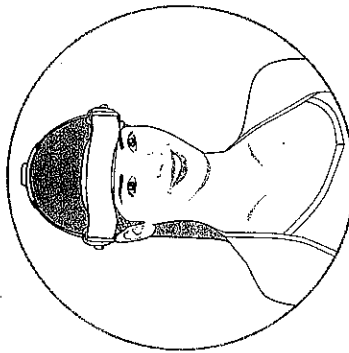


Preparation Before Use

2. Adjust to a comfortable level by turning the knob at the top of uCrown.

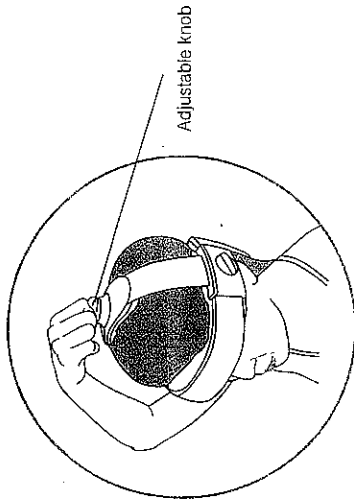

3. You are able to tighten the uCrown by adjusting the knob by the sides. There are numbered indicators for your guidance to ensure that both sides are even. Once you are comfortable with the uCrown, press the [ON] button to start the message program.

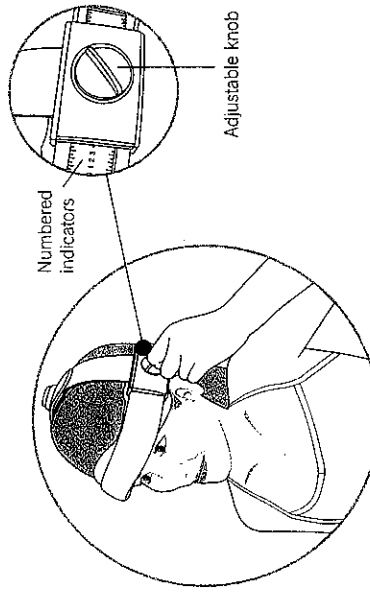

Caution

- Please remove your glasses before using the uCrown as it may cause discomfort during use.
- Please ensure that the airbag are deflated before putting on the head massager. If it's inflated, please change to fresh battery and turn on the head massager. Once on, the air will be released. You may also press the [ON] button to release the air.

Operation

1. To Switch On the uCrown

- Turn the uCrown on by pressing the [ON] button.
- The uCrown will automatically switch to a preset massage programme.
- Press and hold the [OFF] button to turn off the uCrown if you wish to stop during any of the massage modes.

2. Types Of Automatic Massage Mode

You are able to choose between 3 different types of automatic massage programmes by pressing the [AUTO] button.

Well-Being Programme which consist of airbag massage, vibration massage and heat. The '☼', '🔊' and '🔥' icons will be lighted on the remote controller.

Unwind Programme which is a combination of heat and airbag massage. The '🔊' and '☼' icons on the remote controller will light up.

Energise Programme which is a combination of heat and vibration massage. The '🔊' and '🔥' icons on the remote controller will light up.

Pressing the [MANUAL] button or [MANUAL] button will switch to manual mode.

During the massage programme, you are able to change the type of music by pressing the [MUSIC] button.

3. Types Of Airbag Massage Programmes

You are able to choose between 4 different types of airbag massage programmes by pressing the [AIRBAG] button during the manual programme.

Relief Programme - Airbag Massage 1 (massage indicator light will blink once):

- Airbags at forehead will inflate then deflate.
- Airbags at temples will inflate then deflate.
- All airbags will inflate together. Airbags at temples will deflate first followed by the rest.
- All airbags will inflate together. Airbags at forehead and rear will deflate first followed by the rest.
- All airbags will inflate and deflate together.
- Only airbags at temples will inflate and deflate together.
- All airbags will inflate and deflate at the same time.

Rejuvenate Programme - Airbag Massage 2 (massage indicator light will blink 2 times):

- Airbags at forehead and rear will inflate and deflate first, subsequently airbags at temples will inflate then deflate.

Operation

Refresh Programme - Airbag Massage 3 (massage indicator light will blink 3 times):

- Airbags at forehead and rear will inflate and deflate first, subsequently airbags at temple area will inflate then deflate. There will be 3 cycles for this sequence.

Relax Programme - Airbag Massage 4 (massage indicator light will blink 4 times):

- Airbags at forehead and rear will inflate and deflate gradually, subsequently airbags at temple area will inflate and deflate gradually. Thereafter, all airbags will inflate and deflate together gradually.

4. Types of Vibration Massage

You are able to choose between 4 different types of vibration massage by pressing the [VIBRATION] button during the manual programme.

Vibration Massage 1

- Vibration massage is combined with 'Airbag Massage 3'.

Vibration Massage 2

- Vibration massage is combined with 'Airbag Massage 4'.

Vibration Massage 3

- Airbags at the forehead will inflate and remain inflated. A series of vibration massage will begin and at the end of it, the airbags will deflate.

Vibration Massage 4

- All airbags will inflate together and remain inflated. A series of vibration massage will begin and at the end of it, the airbags will deflate.

5. Types of Heat Selection

You are able to choose between the 2 different temperatures by pressing the [HEAT] button.

1. Low
2. High

Operation

6. Music Selection

uCrown comes with 3 different genre of music. Well-Being, Ambient and Natural sounds.

Well-Being: A piece of relaxing music which will guide you to a comfortable and relaxing state of mind. There is a choice of English or Mandarin version. The default will be in English. Press the [M] button to switch to Mandarin version. Please take note that the timer will automatically switch to 15 minutes to ensure you enjoy the benefits of the entire music. Press the [M] button if you would like to move to the next genre of music or hold to off it.

Ambient: 2 composed ambient music for your listening pleasure.

Natural: Sounds of nature to relax your mind. Flowing water, birds chirping, sounds of waves, crickets, and sounds of dripping water.

You are able to change the music by pressing the [M] button. If you would like to turn off the music, press and hold the [M] button.

7. Timer

uCrown has 3 different timer settings. 5 minutes, 10 minutes and 15 minutes. You are able to select your preferred timer by pressing the [T] button. The timer mode you are at will be reflected on the remote controller.

8. Manual programme

Press the [C] button to select the desire message function. In manual mode, you are able to select the different type of airbag massage, heat setting or vibration massage by either pressing the [S] button, [W] button or [D] button.

Caution

- Keep each massage session to no longer than 15 minutes.
- In any case should the airbags do not deflate, press the [A] button to release the air.

Product Care and Storage

1. Storing the uCrown

- Do not use or store the unit where there are magnetic fields or electric waves (e.g. near television sets or speakers).
- Do not place the unit in areas of high temperature, high humidity, or in direct sunlight. Store the unit where there is no moisture.
- Do not stack heavy items on the device.
- Remove the batteries when the unit is not being used for extended period of time.

2. Cleaning the uCrown

- Turn off the power before cleaning.
- Clean the unit with a damp cloth or a neutral cleanser and then wipe with a dry cloth. Do not use volatile liquids such as benzene, thinner or gasoline for cleaning.

Troubleshooting

If you encounter problems with the operation of the uCrown, please check the following points to see if they can be rectified. If the uCrown still malfunctions or does not work, please switch off the uCrown and remove the power plug from the electrical outlet. Contact the OSIM Service Centre* for servicing.


Do not dismantle or attempt to repair the uCrown yourself. Doing so will void the warranty and OSIM will not bear any responsibility for any subsequent consequences.

Problem	Possible Causes	Action
<ul style="list-style-type: none"> No Power. 	<ul style="list-style-type: none"> Are the batteries weak? 	<ul style="list-style-type: none"> If yes, replace them with new batteries.
	<ul style="list-style-type: none"> Are the batteries installed correctly? 	<ul style="list-style-type: none"> Ensure the polarities of batteries are correct. Ensure the batteries are firmly affixed in the battery compartment.
<ul style="list-style-type: none"> The various massage mode cannot be selected. 	<ul style="list-style-type: none"> Are the batteries weak? 	<ul style="list-style-type: none"> If yes, replace them with new batteries. Ensure the batteries are firmly affixed in the battery compartment.
<ul style="list-style-type: none"> No sound can be heard from ear-phones. 	<ul style="list-style-type: none"> Is the ear-phones properly fixed into ear-phone jack? Is the volume control on the ear-phones turned on? 	<ul style="list-style-type: none"> If yes, replace with new ear-phones.

* Please visit us at www.OSIM.com for information on the nearest service centre. Product warranty is valid only in the country of purchase.

Specifications

Model	: OSIM uCrown
Model Number	: OS-3505
Working Environment	: -5°C to 55°C (Temperature) : 30% to 95% (Humidity)
Storage Environment	: -5°C to 55°C (Temperature) : 30% to 95% (Humidity)
Frequency of Vibration	: 40Hz ~ 100Hz
Air pressure	: 860hpa - 1060hpa
Speaker Volume	: 45 to 76 decibel
Intensity of Magnetic Field	: Less than 150mT
Temperature of Heat	: 30°C - 45°C
Power Supply	: DC 6V
Power Consumption	: Less than 6 W
Dimension	: 141 (L) x 68.5 (W) x 44 (H) mm (Remote Control) : 230 (L) x 220 (W) x 234 (H) mm (Head Unit)
Net Weight	: Approx. 0.625 kg

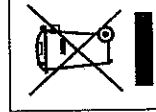

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment of human health from uncontrolled waste disposal, recycle it responsibly. Contact your local authorities for recycling details. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.